

Telephone:
Fax:
VAT Registration No.:

System resetting

When

- After tyre pressure adjustment.
- After tyres have been removed, replaced or repaired.
- After wheels have been changed to different positions on the vehicle.

How

- Switch ignition ON.
- Press button [Fig.2.1](#) or [Fig.2.2](#) to access menu in instrument panel multifunction display.
- Repeatedly press button [Fig.2.3](#) or [Fig.2.4](#) until 'Reactivate tyre press. monitor after corr. press.' is displayed in instrument panel multifunction display [Fig.1.2](#).
- Press button [Fig.2.5](#).
- The message 'Monitor current tyre pressure? No- Yes+' will be displayed in the instrument panel multifunction display.
- Press '+' button [Fig.2.6](#).
- The message 'Tyre press. monitor reactivated' will be displayed.
- The TPMS will learn new values when the vehicle is driven. The time and distance required to complete the procedure is not specified by the manufacturer.

Fig.2

