

[Close Window] [Print Window]

Steps 1-14

 	Remove/install		
 Danger!	Risk of injury caused by fingers being pinched or crushed when removing, installing or aligning hoods, doors, trunk lids, liftgates or sliding roof	Keep body parts and limbs well clear of moving parts.	AS00.00-Z-0011-01A
1	Open engine hood and raise to vertical position	Model 203 Model 209	AR88.40-P-1000P AR88.40-P-1000Q
2	Remove electric fan		AR20.40-P-5000QB
3	Drain coolant at radiator		AR20.00-P-1142QB
4	Take off coolant line from radiator to coolant pump (1) at radiator (2)	 Use screwdriver to push back clamp (3) until it locks in place.  Installation: Replace O-ring (4) for coolant line on radiator to coolant pump (1).	
5	Take off coolant line from radiator to thermostat housing (5) on radiator (2)	 Use screwdriver to push back clamp (6) until it locks in place.  Installation: Replace O-ring (7) of coolant line for radiator to thermostat housing (5).	
6	Take off bracket (8) of ATF lines (9, 10)	Vehicles with automatic transmission	
7	Detach ATF lines (9, 10) on radiator (2)	Vehicles with automatic transmission  Installation: Check clips (11), replace if necessary Replace O-rings of ATF lines (9, 10).	
8	Push ATF line (10) out of bracket (12)	Vehicles with automatic transmission	
9	Push back clamps (13) on radiator (2) on right and left	 Pull condenser (14) forward at the top for this step and detach at the bottom.  Installation: Ensure that condenser (14) is located at the bottom in the brackets (15) on the right and left; at the same time the clamps (13) must be locked in place.	
10	Lift radiator (2) up and out	 Installation: Ensure that the radiators lugs (2) at the bottom sit in the rubber supports.	
11	Install in the reverse order		
12	Inspect cooling system for leaks		AR20.00-P-1010QB
 Danger!	Risk of accident caused by vehicle starting off by itself when engine is running. Risk of injury caused by contusions and burns during starting procedure or when working near the engine as it is running	Secure vehicle to prevent it from moving by itself. Wear closed and snug-fitting work clothes. Do not touch hot or rotating parts.	AS00.00-Z-0005-01A
13	Check transmission oil level and correct if necessary	Vehicles with automatic transmission Model 203, 209 with transmission 722.9 Model 203 with transmission 722.6	AR27.00-P-0270W AR27.00-P-0100AC
14	Check for leaks with engine running		